



Step-2,

Mount-holder Install Location

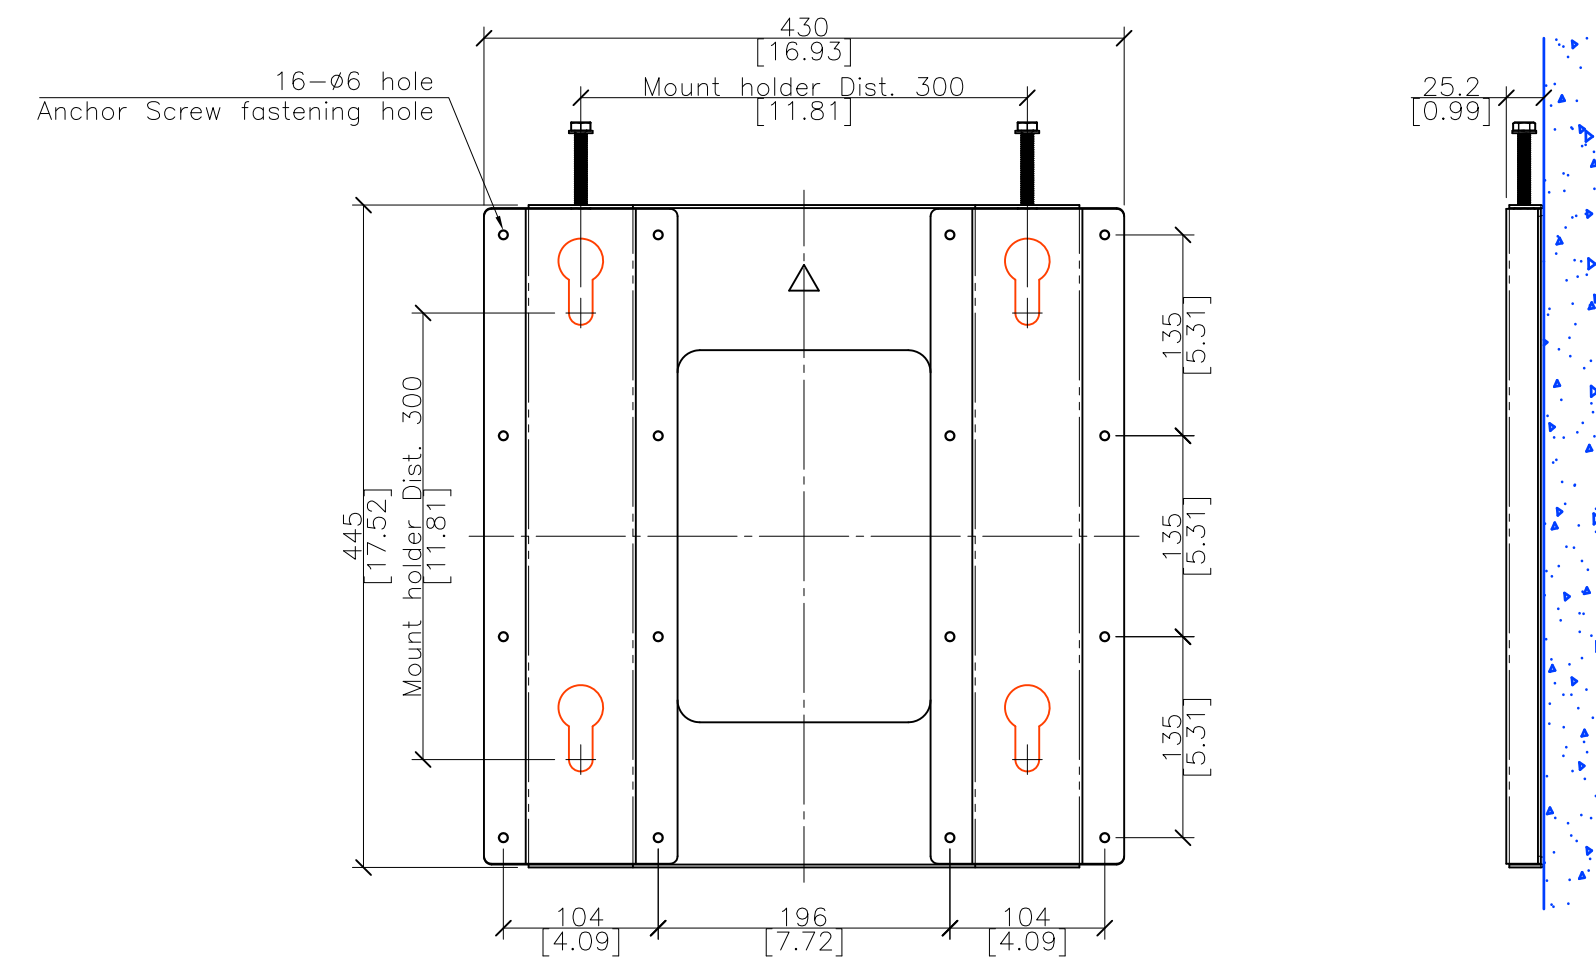


Caution) fixed position of the mount-holder

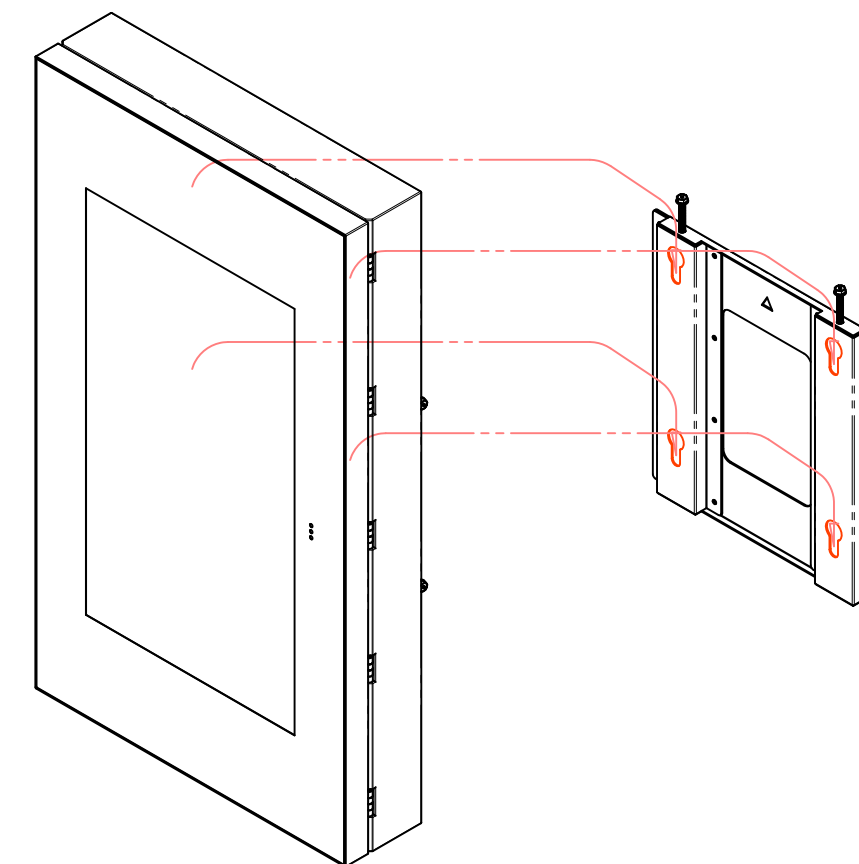

Step-2,


Mount-holder Install Location

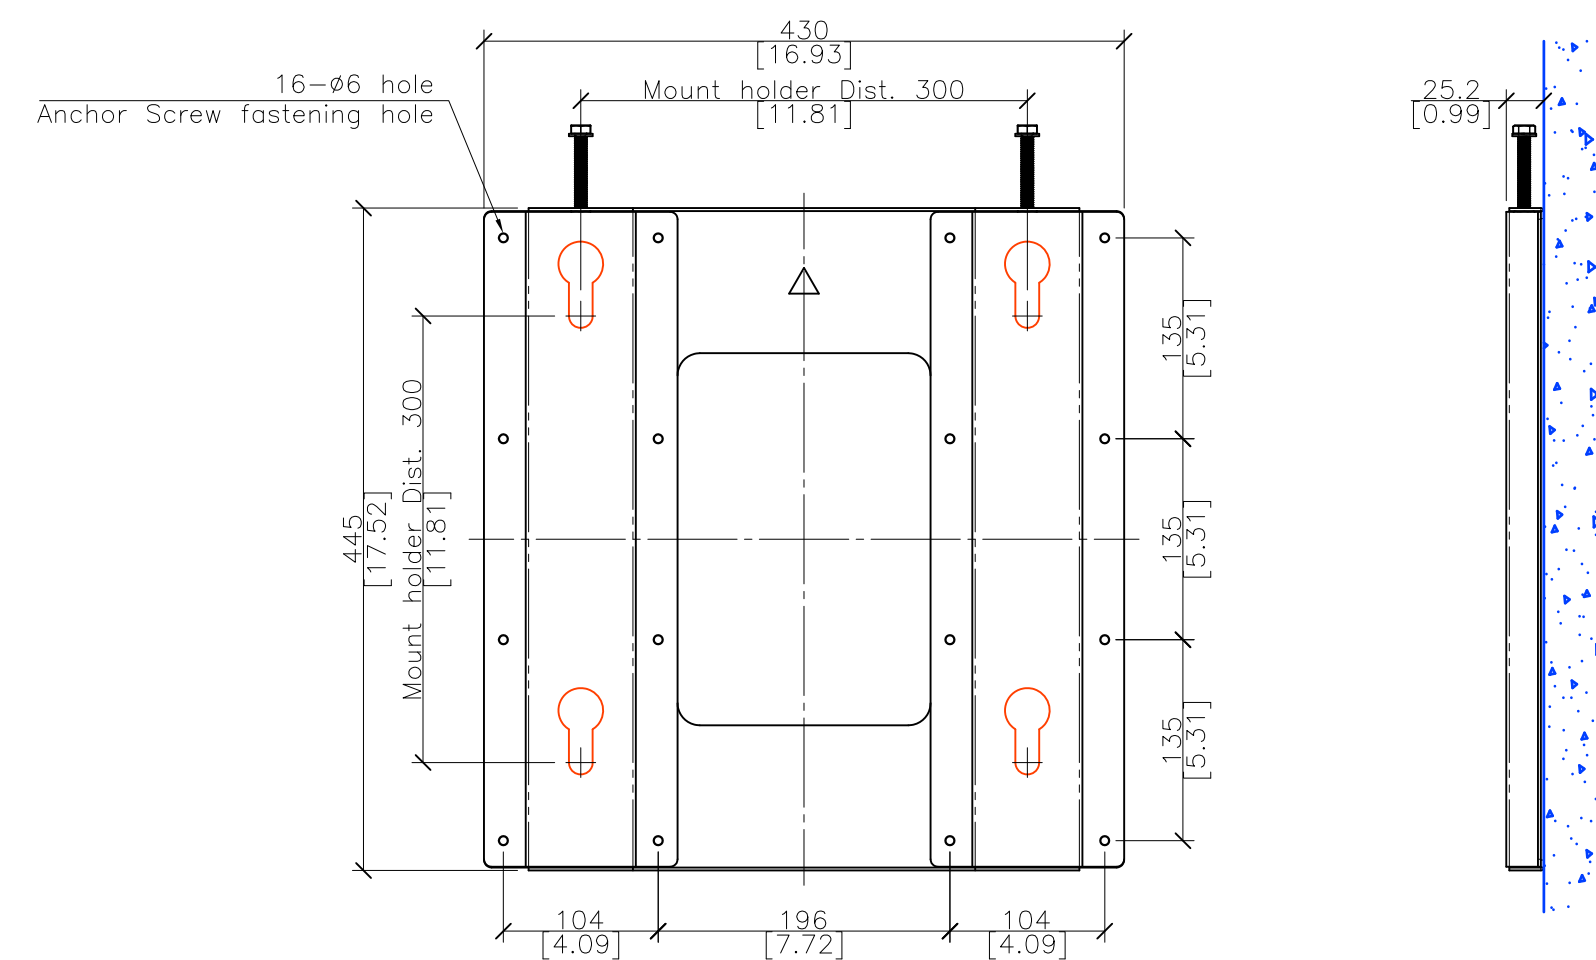

Caution) fixed position of the mount-holder

Dustproof Filter Exchange Guide


Front Door Open & Remove Screw

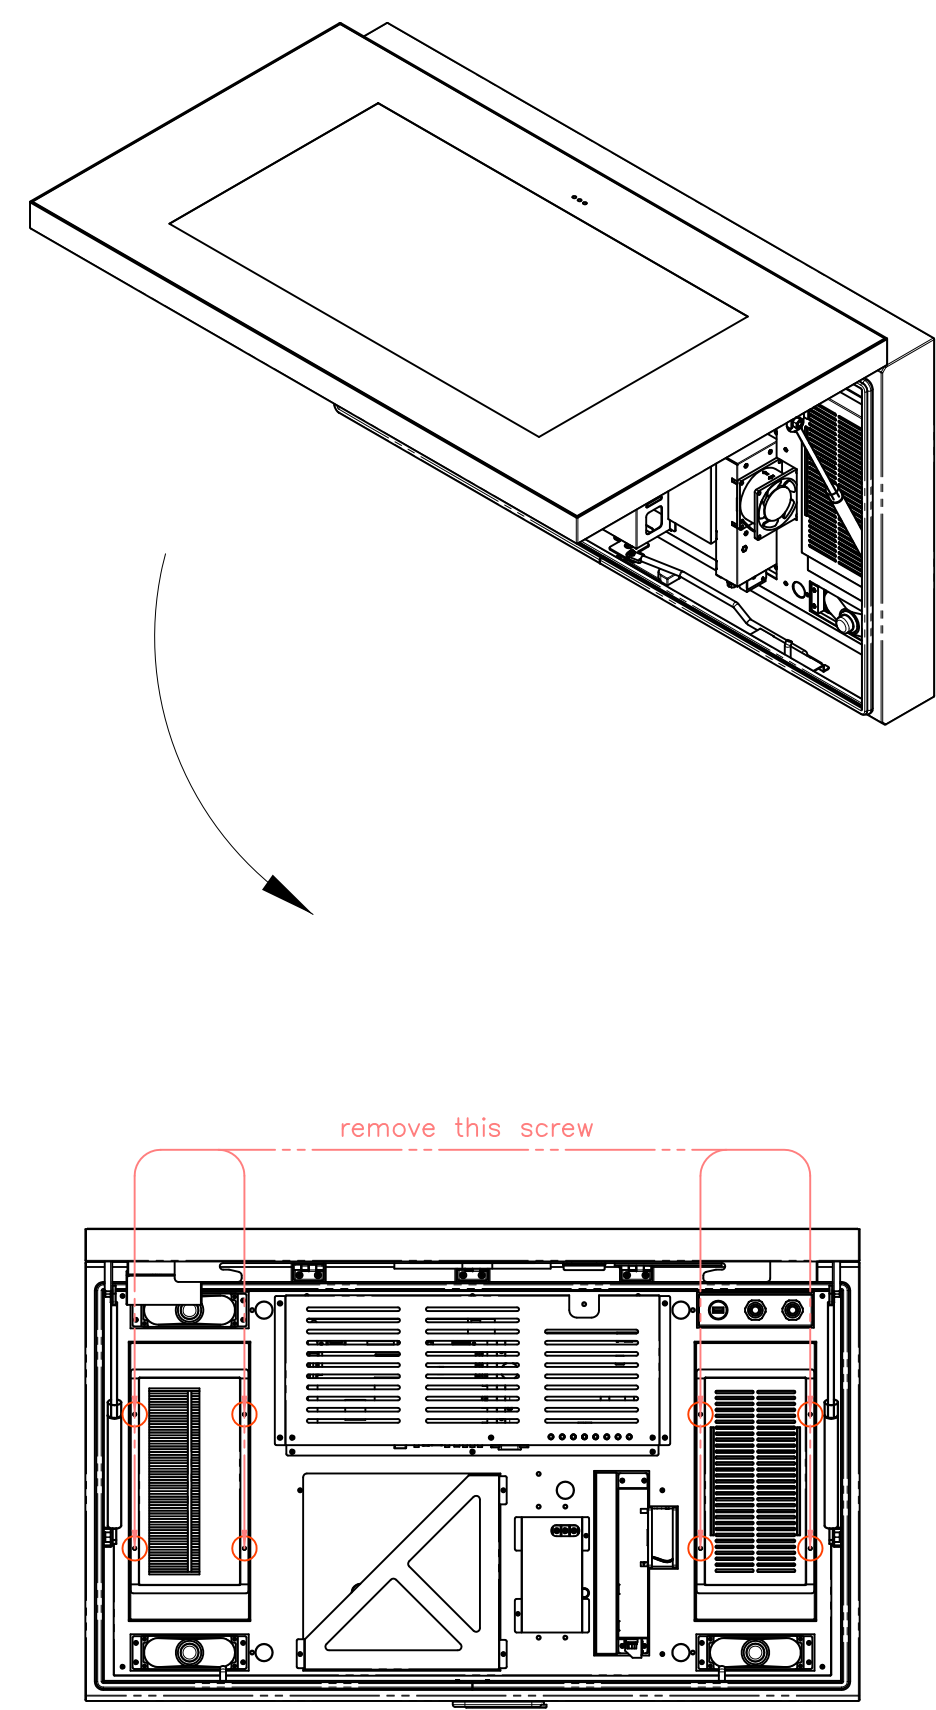

Front View (Door open)


Dustproof Filter Exchange (Exploded view)

- 1. For your safety, please turn off the power before replacing the filter.
- 2. To prevent the influx of foreign substances, ensure to keep the surrounding areas clean.
- 3. Both the front and rear of filter could be different depending on inserting direction.
Please refer to the figure below, and proceed the replacement with careful attention to the color of filter frame and direction.
- * The recommended Dustproof Filter replacement cycle is every eight months, and the replacement cycle may vary at the installation environment.

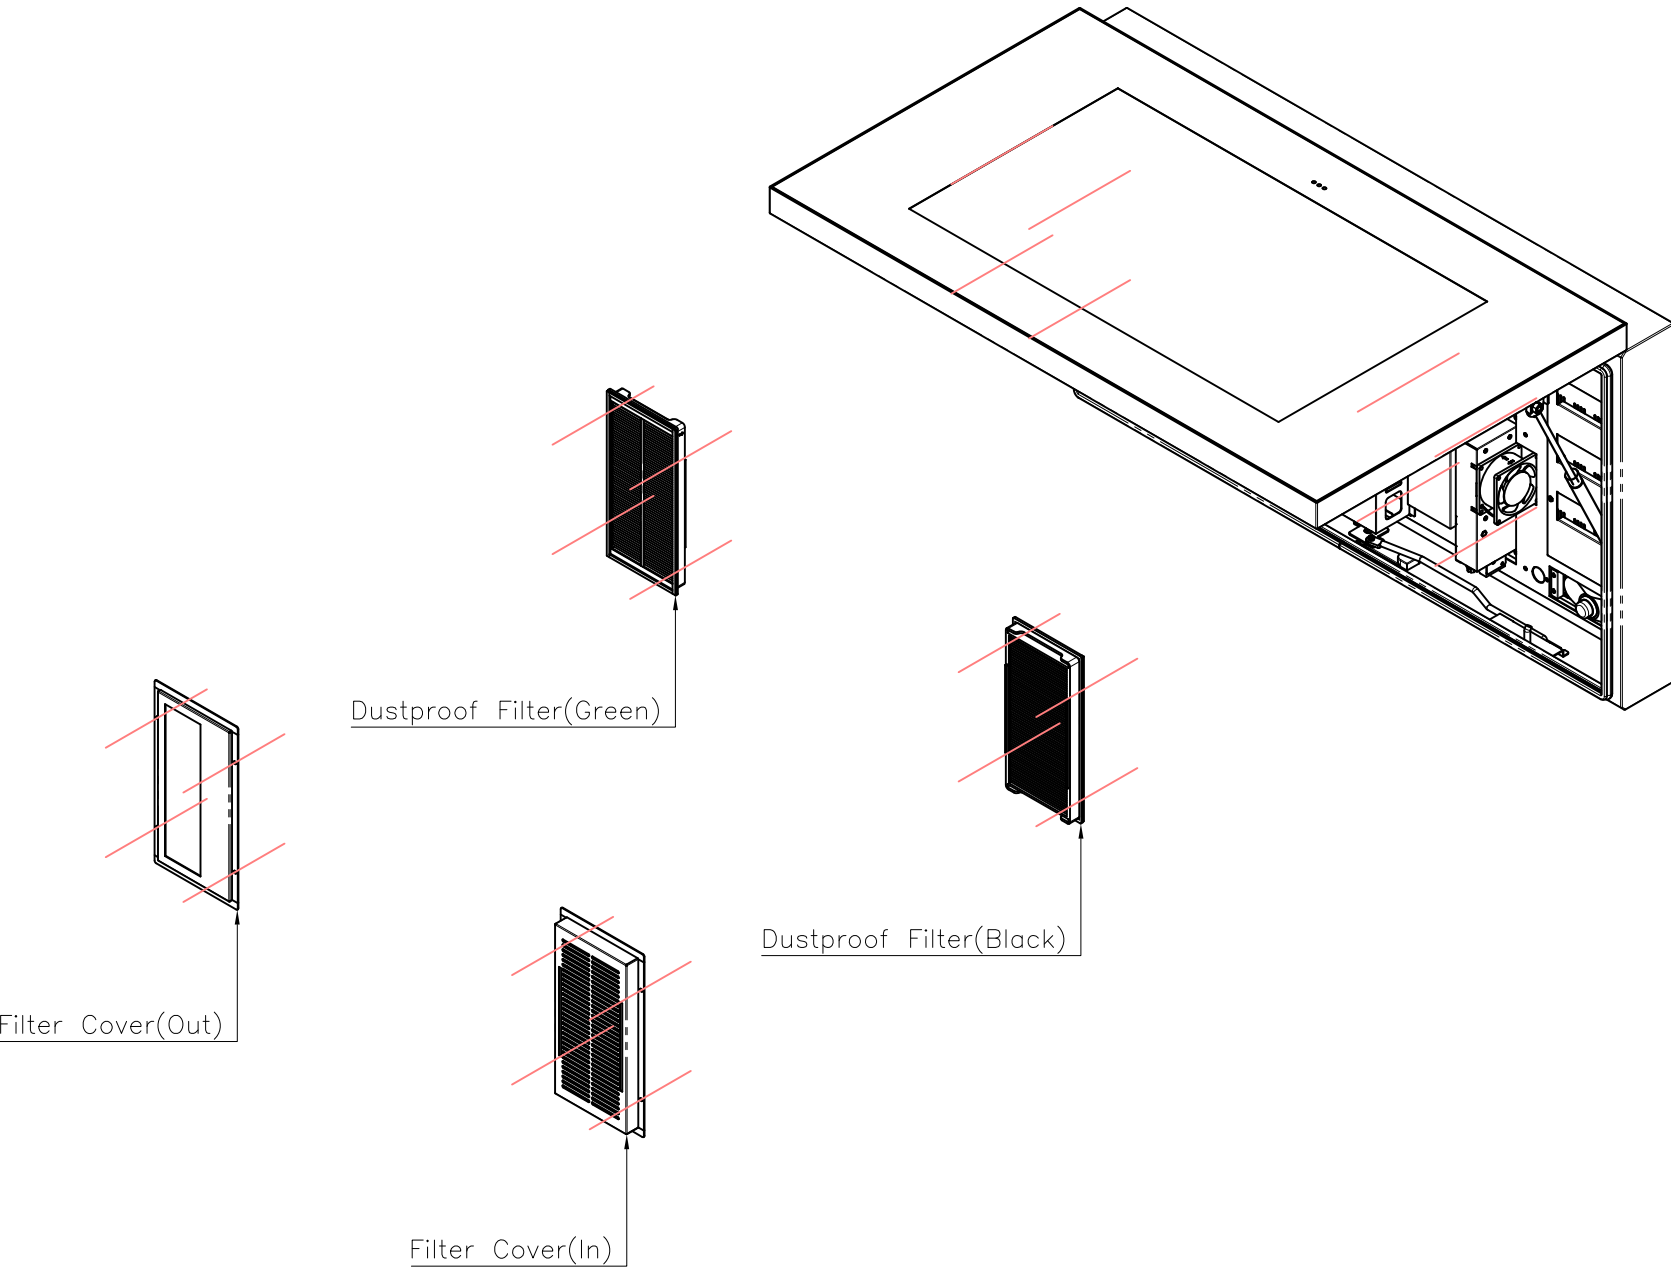


LCD Panel Exchange & Board Repair


Step-4
Caution) LCD Panel is released when you loose the screws.
Handle very carefully to prevent damage on the LCD Panel.

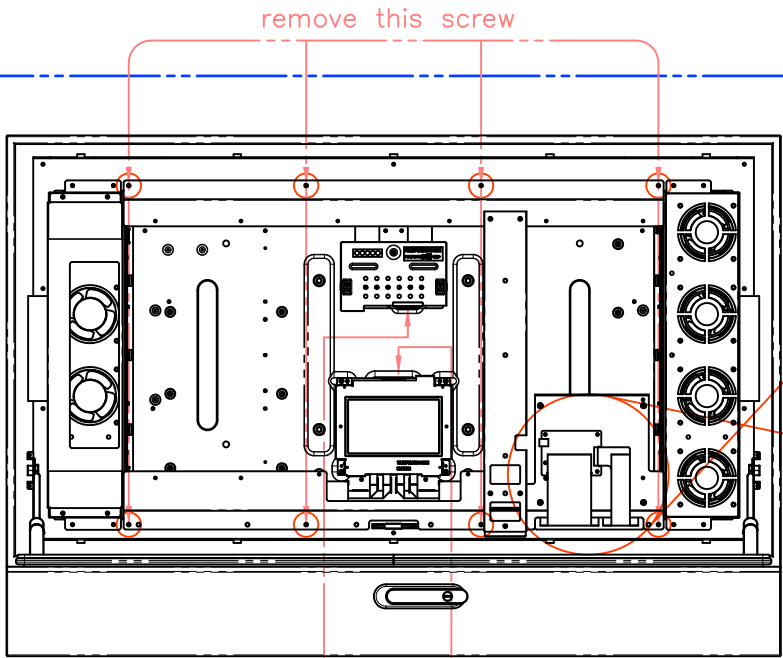


Step-2-1, Remove Touch Cover

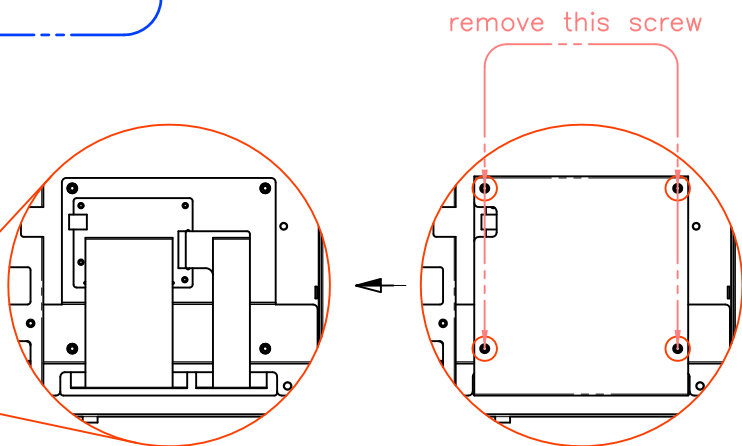

Step-2-2, Touch Cable disconnection.

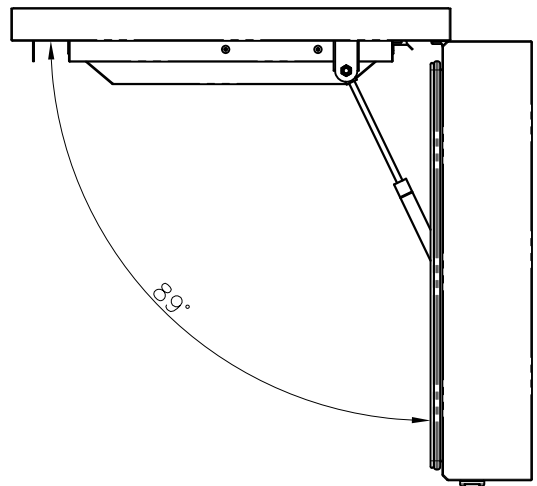


Side view (Right)

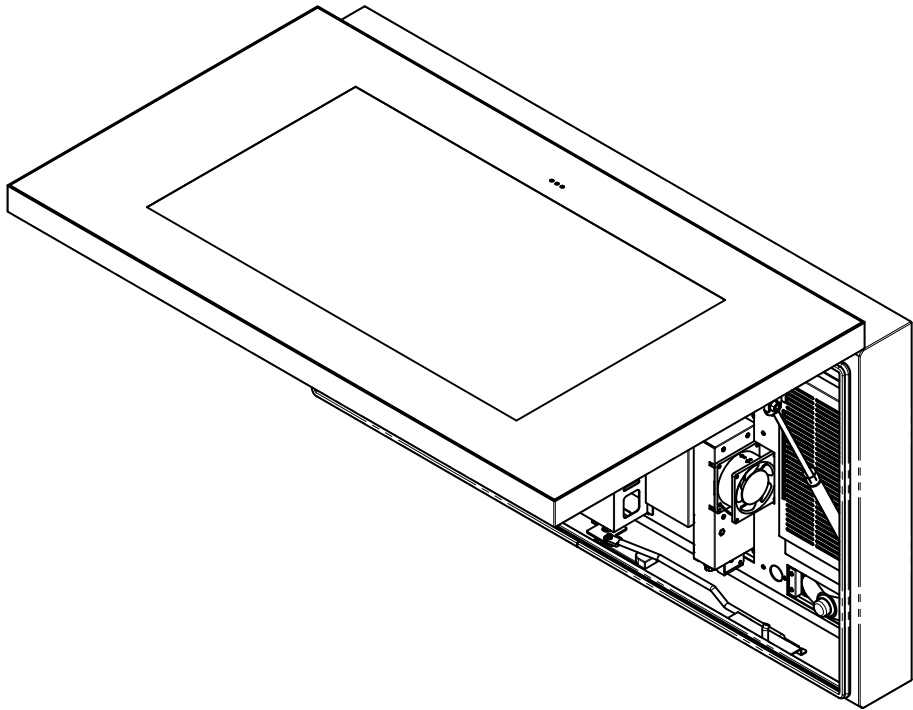

Step-3
LVDS Cable Disconnect
Inverter Cable Disconnect

Bottom view

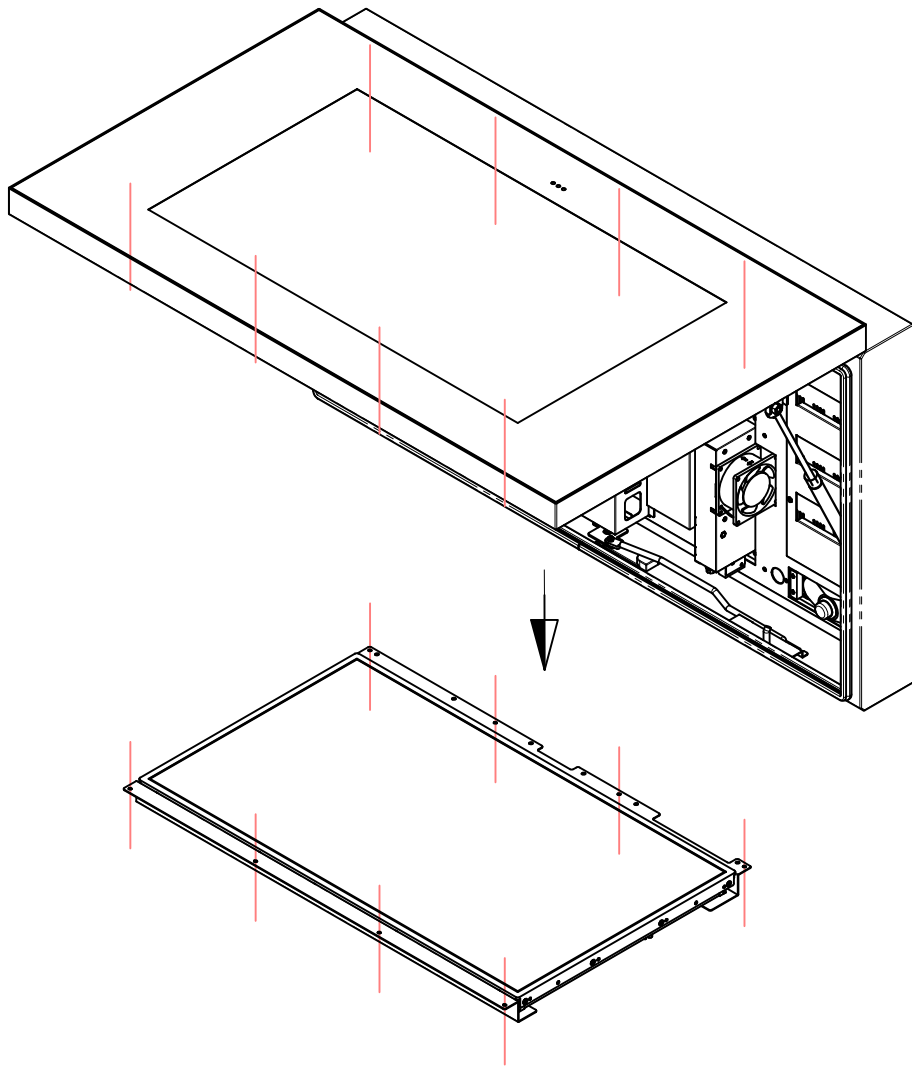

Step-2, Touch Cable disconnection. (Touch - Option)



Step-1, Front open

Step-3, Cable disconnection.

Step-4, Loose screw
(LCD Panel Ass'y)

Step-5, Loose screw
(LCD Panel)

Step-6, LCD Panel separation

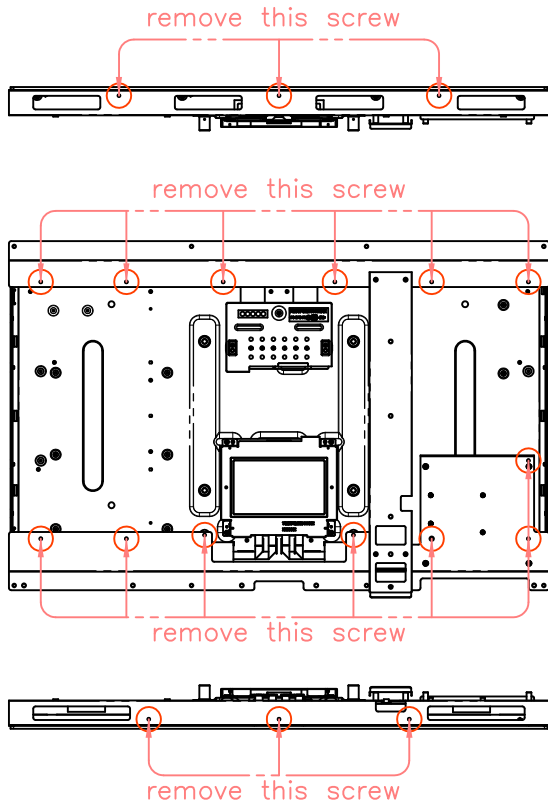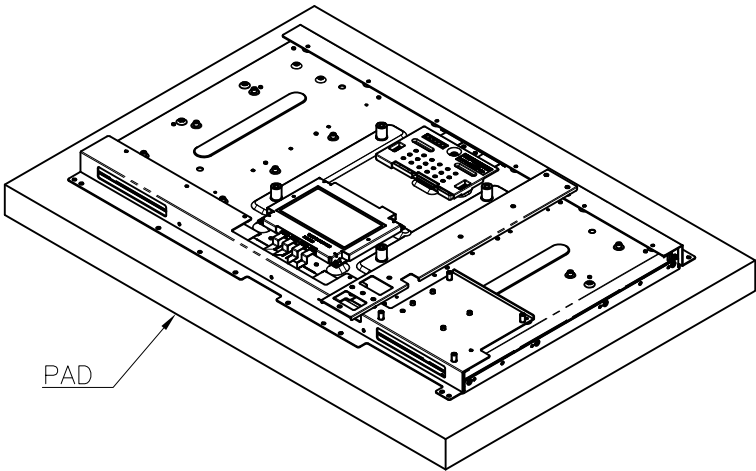

LCD Panel Bracket

LCD Panel

PAD

Top / Rear / Bottom view (LCD Panel Ass'y)